

S A V i O

FilterWeir™ 16

Stone Accessory Kit

For Use with Savio FilterWeir™ 16 (APF16)



K5009

Read entire instructions prior to assembly and operation

K5009

OPERATING MANUAL

Installation

The filterweir stone accessory kit allows you to quickly and easily disguise your filterweir.




After your liner and plumbing are connected. Level the waterfall lip and slightly back fill to hold it in place.



Add Waterfall Foam to the spillway lip.

2 Foam beads need to run all the way across.

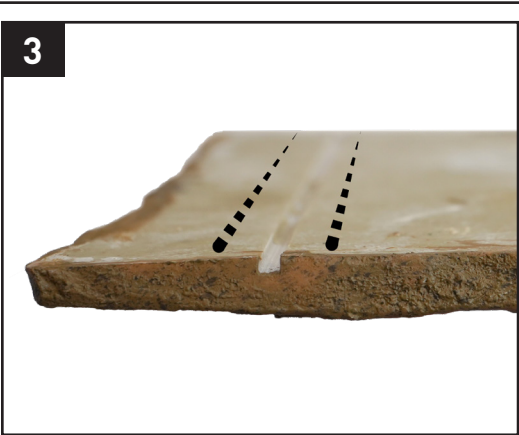

There should be a bead of foam on each side of the stone cover's groove.

4



Place the stone onto the spillway lip.

Hold for 30 seconds.

5



Check the level again. Do not run the water yet.

Cure time depends on a lot of different factors.

To be safe, it is best to wait 24 hours before running the waterfall.

6



The Stone Cover is simply placed on the waterfall.

Do not adhere it.

Customer Service Information



Savio Engineering, Inc.

www.savioponds.com

888-333-2356

Innovative, precision engineered solutions

Advanced water gardening products for healthy, clean living ponds.



Skimmerfilters®



Livingponds® Filters



Pond Packages®



Uvinex™ system



Water Master Pumps™



Waterfall Well™



Springflo Filter Media™



FilterWeirs™



Lighting



Black Foam



Pond Free® Packages